

# TABLE OF CONTENTS

## **YOUR PHONE 3**

|                              |    |
|------------------------------|----|
| Front View Features          | 3  |
| Closed features              | 4  |
| Additional Phone Features    | 5  |
| Battery Installation/Removal | 6  |
| Turning Your Phone On or Off | 11 |

## **PHONE FUNCTIONS 12**

|                      |    |
|----------------------|----|
| Setting Up Voicemail | 12 |
| Calling Features     | 13 |
| Sound Settings       | 15 |
| Display Settings     | 17 |
| Contacts             | 18 |
| Messaging            | 18 |
| Bluetooth            | 21 |
| Web Browsing         | 24 |
| easyedge             | 26 |
| Camera               | 29 |



# YOUR PHONE

## FRONT VIEW FEATURES



1. EARPIECE
2. DISPLAY
3. NAVIGATION AND OK KEY
4. SEND KEY
5. MICROPHONE
6. VIBRATION MODE KEY
7. CLEAR KEY
8. END KEY
9. SOFT KEYS

# CLOSED FEATURES

 


- 1. CAMERA LENS
- 2. FRONT DISPLAY
- 3. SPEAKER



YOUR PHONE

## ADDITIONAL PHONE FEATURES

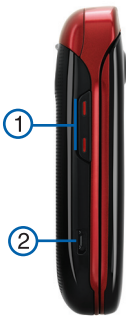

1. VOLUME KEY
2. POWER/USB PORT
3. CAMERA KEY
4. 3.5 MM HEADSET JACK

## BATTERY INSTALLATION/REMOVAL

Your phone is powered by a rechargeable, standard Li-Ion battery. A charger is included with the phone, for charging the battery.

**NOTE:** Although the battery comes partially charged, you must fully charge this battery before using your phone for the first. A fully discharged battery requires up to 4 hours of charge time.

**WARNING:** Use only Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

### Installing the Battery

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and firmly “pop” the cover off the device (1).
3. Insert the top end of the battery into the phone housing (2), aligning the gold contacts on the battery with those in the battery compartment.
4. Push down on the bottom of the battery down until it snaps into place (3).

5. Replace the battery cover by sliding it back into place and snapping the edges securely at all four corners.



Battery Insertion



Battery Removal

## Removing the Battery

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and firmly “pop” the cover off the device (1).
3. Place your finger into the battery removal slot (4) and lift the battery out of the compartment.
4. Replace the battery cover by sliding it back into place and snapping the edges securely at all four corners.



## Charging Your Battery


Your phone comes with a charger to rapidly charge your phone from any 120/220 VAC outlet.

**NOTE:** Although the battery comes partially charged, you must fully charge this battery before using your phone for the first.

1. Plug the charging head into a standard AC power outlet.



2. Insert the USB cable into the port at the base of the phone.
3. Once complete, unplug the charging head from the power outlet and remove the USB cable from the phone.

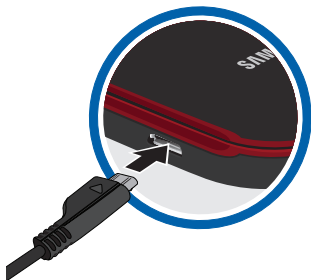

INCORRECT

## TURNING YOUR PHONE ON OR OFF


- ▶ Press and hold  (**End/Power**) until the phone turns on or off.

# PHONE FUNCTIONS


## SETTING UP VOICEMAIL

Voicemail allows callers to leave voice messages, which can be retrieved any time.

**NOTE:** Once your Voicemail account has been properly set up, you can use the **Voicemail** folder (under the **Messages** menu) to view details for your current voicemail messages.


1. In standby mode, press and hold  or dial your own mobile number to dial Voicemail.
2. Follow the prompts in the new user tutorial to setup your mail box.

## Listening to Your Voicemail

1. In standby mode, press and hold  or dial your own mobile number to dial Voicemail. After connection, you will hear your voice greeting.
2. When prompted, enter your password.

# CALLING FEATURES

## Making a Call


1. In standby mode, press the digits of the telephone number to call using the keypad and press  (**Send**).

**IMPORTANT:** Remember to include necessary long distance codes.

## Ending a Call



- Press  (**End/Power**) to end a call.

## Answering a Call

- Press  (**Send**) to answer an incoming call.





## Call Waiting

This feature allows you to receive new inbound calls while in an active call.


1. Press  (**Send**) to place the current call on hold and answer the new call.
2. Press  (**Send**) again to return to the first call.

## Making a Three-way Call

Three-way calling is similar to a conference call with a total of three people (including yourself). Make a call to two numbers and connect them together on your phone using three-way calling.

1. In standby mode, enter the number for the first caller on your dialpad, then press  (**Send**).
2. Once connected to the first caller press  (**Send**) to place the first caller on hold and begin your second call.
3. Enter the second party's phone number and press  (**Send**).
4. Once the second party answers, press  (**Send**) to connect all three parties.



## Using the Speakerphone

- During a call, press  (**SPK**) to switch between the earpiece and the speakerphone.

## SOUND SETTINGS

The following information describes how to adjust the volume levels on your phone and assign a new ringtone.




### Adjusting the Volume

1. In standby mode, press the  (**Volume key**) up or down .

### Activating/Deactivating Vibrate Mode

1. Press the Volume key down until **Vibrate** appears in the display.
2. Press the Volume key up to resume Normal mode.

## Assigning Ringtones

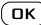1. In standby mode, press  (**Menu**) → **Settings** → **Sound Settings** → **Ringer Type** → **Voice Calls**.
2. Highlight a ringtone and press  (**Play**) to play the selected ringtone. Press again to stop playback.
3. Press  to set the highlighted ringtone as your new call sound.



# DISPLAY SETTINGS

## Changing the Wallpaper

1. In standby mode, press **OK** (Menu) → **Settings** → **Display Settings** → **Wallpaper** → **Main Display/Front Display**.



MAIN DISPLAY



FRONT DISPLAY

2. Highlight a preloaded wallpaper from **Preset Images** or a photo you've taken from **My Images** and press **OK**.



## CONTACTS

### Creating a Contact



In standby mode, press  (**Contacts**) →   
(**Options**) → **New Contact** → enter your  
information and press  (**Save**) to save.

## MESSAGING


### Accessing Messaging

- ▶ In standby mode, press  (**Messages**).  
– OR –
- ▶ In standby mode, press  (**Menu**) →  
**Messages**.

## Create and Send a Text Message

1. In standby mode, press  (**Messages**) → **Send Message** → **Text Message**.
2. Manually enter the destination address(es).  
Press  (**Add**) to select available recipients from either **From Contacts**, **Groups** or **Recent Calls**.

**NOTE:** When manually entering a contact, if the contact is stored in your Contact List, you will see a list of partially matched names in the drop down box.

3. Scroll to the **Text field** and enter your message.
4. Press  (**Send**) to send.



**NOTE:** Text Messages are charged in accordance with your Messaging Plan.



## Create and Send a Picture Message

**NOTE:** You can send a Picture message to up to ten recipients. Enter each recipient's address or phone number in a separate **Send To** field of the Picture message composer.

1. In standby mode, press  (**Messages**) → **Send Message** → **Picture Message**.
2. Manually enter the destination address(es). Press  (**Add**) to select available recipients from either **From Contacts**, **Groups**, **Recent Calls** or **OnlineAlbum**.

**NOTE:** When manually entering a contact, if the contact is stored in your Contact List, you will see a list of partially matched names in the drop down box.

3. Scroll down to the **Subject field** to enter a subject.
4. Scroll down to the **Text field** and enter your text.
5. Scroll down to the **Picture field** and press  (**Picture**) and select a picture from the gallery or press  (**Camera**) to capture a picture to send using the camera function.

6. Scroll down to the **Sound field**, press  (**Sound**) and select a sound.
7. Press  (**Send**) to send your completed picture message.

## BLUETOOTH

Bluetooth® is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

### Turn Bluetooth On or Off

1. In standby mode, press  (**Menu**) → **Tools** → **Bluetooth** → **Bluetooth Settings** → **Enable/Disable**.
2. Press  to set Bluetooth to **ON/OFF**.

## Adding a New Device

1. In standby mode, press **OK** (**Menu**) → **Tools** → **Bluetooth** → **Bluetooth Settings** → **Enable**.
2. Press **OK** to set Bluetooth to **ON**.
3. Place the new external Bluetooth device in discovery mode.
4. On your phone, press **OK**. Your phone begins searching for discoverable and visible devices, then display them on your screen.

5. Select the device you want to pair with your phone. The phone then attempts to automatically pair with the selected device.
  - If automatic pairing fails, you are prompted to enter the passkey or PIN for the selected device. (For other wireless handsets, choose a passkey or PIN and enter the same one on both devices. For more information on headsets and handsfree units, refer to the user manual for the other device.)
  - Except for other wireless handsets, you are then prompted to confirm whether you want to connect your phone with the other device.
6. Press **OK** (**YES**) to complete a connection with the other device.

## WEB BROWSING

### Launching and Exiting the Web Browser

- ▶ In standby mode, press  (**Menu**) →  (**Browser**).

**To exit browser:**

- ▶ Press  (**End/Power**) to exit.



## Tone Room Deluxe

Tone Room Deluxe enables you to access the latest and hottest content from your favorite artists for ringtones and ringback tones from your phone or the web. This easy to use service features a music catalog with tens of thousands of titles for you to discover. Personalize your experience and express yourself by subscribing to Tone Room Deluxe and using ringback tones to customize music for your friends and family to hear when they call you.

Tone Room Deluxe allows you to buy a la carte ringtones or a subscription which provides access to the Tone Room Deluxe ringback service along with new credits that you can use each month to download ringtones or acquire ringback tones. You can purchase additional content once you exhaust your monthly credits.


- In standby mode, press **OK** (**Menu**) →  (**Tone Room**).

## EASYEDGE

With **easyedge**<sup>SM</sup>, you can download full featured applications over the air including games, personalized ring tones, pictures, and more.

**NOTE:** **easyedge**<sup>SM</sup> from U.S. Cellular is only available on approved phones and requires an **easyedge**<sup>SM</sup> data plan. Visit [www.uscellular.com/easyedge](http://www.uscellular.com/easyedge) or call U.S. Cellular customer service (by dialing 611 on your phone) and ask about **easyedge**<sup>SM</sup>.

## Launching and Exiting easyedge





- ▶ In standby mode, press **OK** (**Menu**) →  (**easyedge**<sup>SM</sup>).

### To exit easyedge:



- ▶ Press  (**End/Power**), at the popup press  (**Yes**) to exit.

## Applications

Whether you're looking for the hottest ringtone, the latest game, or an awesome GPS navigation tool, you'll find it.

1. From the Home screen, press  (**Menu**) →  (**easyedge**) →  (**Shopping Cart**).
2. Select a category → select an application → select a pricing option.
3. Review the Terms and Conditions →  (**Next**) to begin the download.
4. Once downloaded you will see an icon for your new application in the easyedge menu. Click on the icon to start the application.




## Downloading Mobile Email

1. From the Home screen, press  (**Menu**) →  (**easyedge**) →  (**Shopping Cart**).
2. Select **Catalog** → **My Data Apps** or **My Data Apps Plus** → **Free Mobile Email** → **Get Pricing** → select a purchasing option.
3. The application will download and install on your device.

## Navigation

With Your Navigator, get all of the features of an advanced car navigation system on your mobile phone with voice turn-by-turn navigation enabled by GPS.

### Downloading Your Navigator

1. From the Home screen, press  (Menu) →  (easyedge) →  (Shopping Cart).
2. Select **Catalog** → **Navigation** → **Your Navigator** → **choose purchasing option**.
3. The application will download and install on your device.

### Launching Your Navigator

- From the Home screen, press  (Menu) →  (easyedge) →  (Your Navigator).

## CAMERA

Use your device to take full color digital pictures, display them on your phone's vivid color display, and instantly share them


with family and friends. It's fun, and as easy to use as a traditional point-and-click camera. This section explains how you can do the following:

- Take pictures with your phone's built-in digital camera.
- Send your pictures to others in Picture messages.



Set the several options associated with the camera that help you take crisp, clear pictures.

## Taking Pictures

Taking pictures with the built-in camera is as simple as launching the camera, choosing a subject, pointing the lens (located on the front of your phone's flip, near the hinge), and pressing a button.

1. In standby mode, press and hold  (**Camera**) on the right side of the phone.

**NOTE:** You can also activate the camera by pressing for  (Menu) → Multimedia → Camera.

2. Using the display as a viewfinder, point the camera lens at your subject.
3. Press  (**Take**) to capture the image.
4. Press  (**Save**) to save the picture.

## NOTES

[illegible]